

Cleaning procedures for the Panini My Vision X[®] Cleaning Kit (Part number SE-00130-01)



Panini My Vision X[®] Cleaning KIT:
25 – Panini Waffletechnology™
Cleaning Cards
6 - Alcohol Self-saturating Snap Swabs
1 - Pack of Lint Free Dry Wipes

Cleaning Kits may be ordered by faxing your purchase order to (937) 291-2197.

Suggested cleaning intervals are defined in this text but you might find more frequent cleaning is warranted in increased volume locations or in dusty environments.

It is also recommended to purchase locally canned compressed air and during the weekly cleaning cycle the transport should be dusted out

Weekly Cleaning

It is suggested to run the cleaning card once a week. This will remove dust and dirt buildup from the rollers and image cameras. This will extend the interval between needed manual cleaning as described in the Operator Manual for these components.

1. Remove Ink Cartridge if present during the cleaning process then replace when finished.
2. Next, start the imaging application again and cycle the cleaning card through the My Vision X[®]. Run the cleaning card through the My Vision X[®] 3-7 times, each time rotating the cleaning card top to bottom and flipped over to a different orientation. Cancel the application transaction and discard the used cleaning card.



Ink Jet maintenance

Clean the ink jet cartridge once a week at the same time the cleaning cards are run through the My Vision X[®]. Clean the ink jet cartridge removed prior to running the cleaning cards by wiping the nozzles with a lint free wipe. Replace the cartridge in the nest.



Monthly

Streaks may develop on the image caused by a build up of ink deposits. If a streak develops on the image and running the cleaning card does not remove streak, remove the inner and outer covers, gently open the front image camera and using an alcohol saturated snap swab wipe down the glass on both front and back cameras. Close the front image camera and replace both the inner and outer covers.

